

GS-52 Talking Message Center

After 12/06

PN 77186


The GS-52 Talking Message Center is a stand alone, retrofitable, compact control that allows you to "speak" to your customers. It can be programmed to speak English, Spanish, or English & Spanish. The GS-52 will announce up to 13 different functions and several programmable messages. It will even "learn" the operation of your timer. It also comes with an RCA jack to allow for connection of an external music or message player(not included).

- 1) Bay idle: External audio player playing(if installed)
- 2) Money deposited: "Thank You" is announced*
- 3) Amount of money deposited is announced*
- 4) Timer Turns On: Greeting #1* is announced. Default message is "Welcome to our carwash"
- 5) When a function is selected, appropriate message is announced.
- 6) After the timer is learned**, it will announce two different messages as the time on your timer runs down. "Time remaining...1 minute" at one minute left on timer and "Time remaining...30 seconds" at 30 seconds left on timer.
- 7) When the timer turns off: Greeting #2* is announced. Default message is "Thank You".
 - *These messages are programmable. See programming for instructions.
 - **For "learning" instructions, please see installation & setup

Installation & Setup

- 1) The GS-52 should be installed in the equipment room near the equipment panel of the bay for which it is going to provide messages.
- 2) Wire the GS-52 to your equipment. (Fig. A)
- 3) To insert wire into the GS-52, strip wire about 1/4", depress tab on appropriate location on GS-52 and insert wire in opening. Releasing the tab will lock wire in place.(Fig. B)
- 4) Learning the timer: After making all necessary wire connections on the GS-52, you need to have it learn the operation of your timer. To do this, deposit exactly enough

money in the bay to start the timer, and run through one complete cycle without interruption. At the completion of the cycle the GS-52 will have learned the operation of your timer.

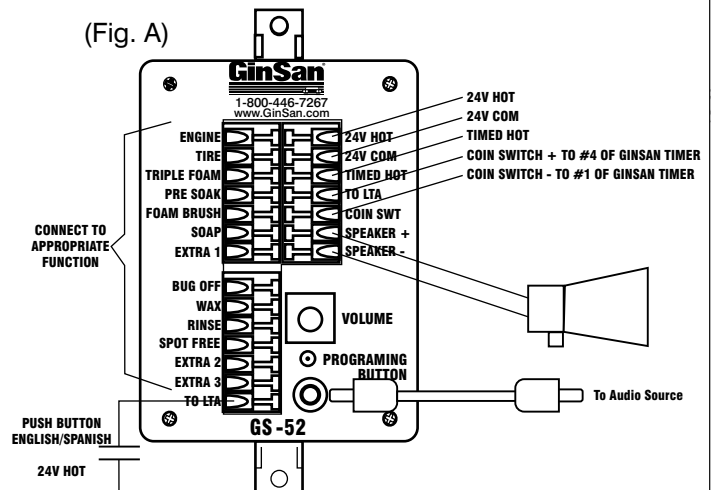

(Fig. B)



Functions listed on cover of GS-52 and their default message.

Function	Default Message
Engine	Engine Degreaser*
Tire	Tire Cleaner*
Triple Foam	Triple Foaming Conditioner
Presoak	Presoak
Foam Brush	Foam Brush
Soap	Soap
Extra #1	Marine Flush**
Bug Off	Bug Off
Wax	Wax
Rinse	Rinse
Spot Free	Spot Free
Extra #2	Vacuum**
Extra #3	Shampoo**

*If Engine Degreaser and Tire Cleaner are tied together the message will be "Engine/Tire Cleaner".

**These Messages are programmable. See PROGRAMMING for instructions.

GS-52 Talking Message Center

After 12/06

Programming

All programming is accomplished using the programming button.

To change Extra #1 (Marine Flush is Default)

- a) Push and hold button for 5 seconds.
- b) Repeatedly push the button until the desired message from the Extra function list is played.
- c) If the button is not pushed for 5 seconds, a tone is sounded and the message is locked in.

To change Extra #2 (Vacuum is default)

- a) Push button 1 time
- b) Push button again for 5 seconds.
- c) Repeatedly push the button until the desired message from the Extra function list is played.
- d) If the message button is not pushed for 5 seconds, a tone is sounded and the message is locked in.

To charge Extra #3 (Shampoo is default)

- a) Push button 2 times
- b) Push button again and hold for 5 seconds.
- c) Repeatedly push the button until the desired message from the Extra function list is played.
- d) If the message button is not pushed for 5 seconds, a tone is sounded and the message is locked in.

Extra Function List

1 Wheel Cleaner	8 Triple Foam Brush	15 Rubber Protectant
2 Wash	9 Rinse	16 Hi Pressure Rinse
3 Dry	10 Marine Flush	17 Foam Conditioner
4 Vacuum	11 None	18 Dur-A-Shield
5 Shampoo	12 Wheel & Chrome	19 Rain-X
6 Fragrance	13 Gloss Wax	20 None
7 Clear Coat	14 Luster Wax	21 None

To Change Greeting #1 (Played when the timer turns on)

- a) "Welcome to our carwash" is default message.
- b) "Thank you for using our carwash" is optional or no message at all.
- c) Push button 3 times.
- d) Push button again and hold for 5 seconds
- e) Each time you push the button after 5 seconds will play a message or "none" for no message.
- f) To lock message: After the message (or none for no message) is played, wait 5 seconds before pushing button again. A tone will sound and message is locked.

To Change Greeting #2 (Played when time has expired)

- a) "Thank You" is default message.
- b) Other optional messages:
"Thank You For Your Business"
"You have 15 seconds to deposit more money"
"You have 30 seconds to deposit more money"
No Message

c) Push button 4 times

- d) Push button again and hold for 5 seconds
- e) Each time you push the button after 5 seconds will play a message or "none" for no message.
- f) To lock in a message: After the message or "none" is played, do not press the button for 5 seconds. A tone will sound and the message will be locked.

To activate "Thank You" (Plays when 1st coin is deposited)

- a) "Thank You" is on by default
- b) Push button 5 times then push again holding for 5 seconds
- c) Push button again to play "Thank You"
- d) Push again to play "None" for no message
- e) To lock message: After message (or "None" for no message) is played, wait 5 seconds before pressing button again. A tone will sound and message is locked.

Language Setup

- a) Optional language settings (English is default) "Spanish" & "English and Spanish"
- b) Push button 6 times
- c) Push button again and hold for 5 seconds
- d) Each time you push the button after 5 seconds will play the language choice.
- e) Language is locked in if button is not pushed for 5 seconds.

Time Remaining

- a) "Time Remaining" is on by default
- b) To activate press button 7 times and then press again, holding for 5 seconds.
- c) Push again to play "Time Remaining"
- d) Pushing again will play "None". Greeting is off.
- e) To lock in message: After message (or "None" for no message) is played, wait 5 seconds before pressing the button again. A tone will sound and the message is locked.

Denomination Setup

- a) \$.25 increments is default
- b) Dollar increments is optional
- c) Push button 8 times
- d) Push button again and hold for 5 seconds.
- e) Each time you push the button after 5 seconds will play the denomination choice.
- f) Choice is locked in if button is not pushed for 5 seconds.

Play All Messages

PLAY ALL is activated by pressing the button 9 times and then pressing a 10th time for 5 seconds.