

MULTITRON SENSITIVITY ADJUSTMENTS

Adjusting Sensitivity:

After using the Multitron, it may be necessary to adjust the selectivity of the unit. This is accomplished by using the PROGRAM button and light.

1. Press and hold PROGRAM button until light turns on and continue to hold PROGRAM button until light turns OFF.


NOTE: Changing the Sensitivity setting will NOT effect already programmed coins.

2. Light will flash indicating current selectivity setting of first coin type. (1-10 flashes)
3. Press PROGRAM button in quick succession to enter desired setting. (1-10 flashes)
Light will flash once for each press-release of button.

NOTE: If user fails to press button within 2 seconds, current setting is maintained and unit moves to next coin.

4. To go on to next coin, wait 2 seconds for light to flash (1-10 flashes indicating next coin's setting), and continue with second coin type (see step 3).
5. When light remains OFF, adjustments to all programmed coin types have been made.

Sensitivity Setting:

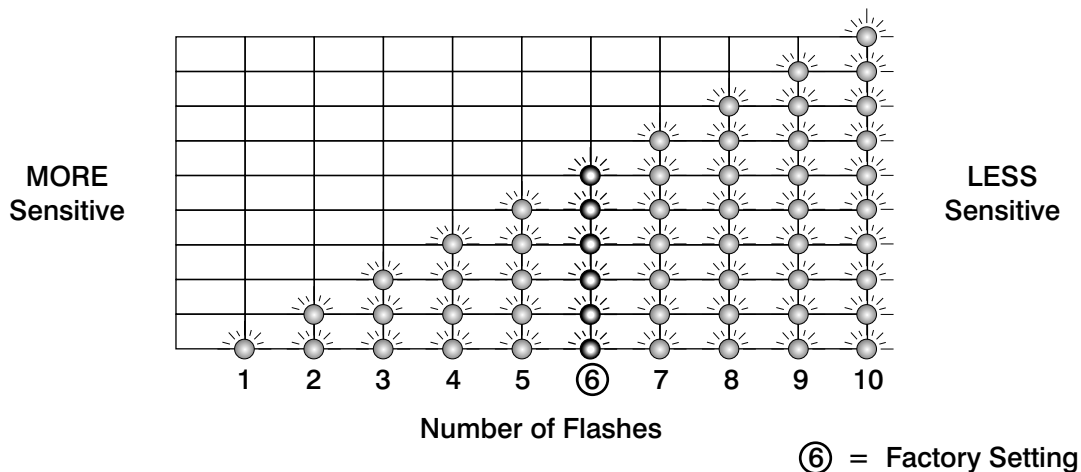

EXAMPLE: Unit Accepts unwanted tokens, change sensitivity setting to 5 flashes.

NOTE: GinSan Recommends to change the setting, one increment at a time.

SEE TG-401 FOR BASIC HOOK UP
AND PROGRAMMING